

Materials & Supply List:

- Sandpaper
- Clean, lint-free rag
- Rust-Oleum Painter's Touch 2X Ultra Cover Primer | Flat Grey
- Rust-Oleum spray paint (select to match door color):
 - Rust-Oleum Stops Rust Flat Protective Enamel | **Flat Black** (Black Satin)
 - Rust-Oleum Universal Metallic Paint & Primer In One | **Flat Soft Iron** (French Grey)
 - Rust-Oleum Universal Metallic Paint & Primer In One | **Oil Rubbed Bronze** (Oil Rubbed Bronze)



WARNING: Please follow all manufacturer's instructions and wear a dust mask for respiratory protection.

Step 1



Inspect damaged area to be repaired. If the unit has deep gouges, they may have to be filled with Bondo, sanded flush, then finished.

Visit (www.bondo-online.com) for details.


Remove any loose paint, rust, dirt or corrosion. Use sandpaper to prepare the area for touch-up.

Step 2



Using a clean cloth and a commercial detergent, wash the sanded area thoroughly. Rinse with fresh water and allow to fully dry.

Step 3

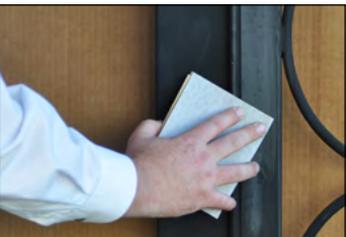

Read and follow all manufacturer's instructions provided with the Rust-Oleum 2X Primer Spray. Shake can vigorously for one minute after the mixing ball begins to rattle. (If mixing ball fails to rattle DO NOT STRIKE CAN. Contact Rust-Oleum.) Hold can upright 10-16" from surface and spray in a steady back-and-forth motion, slightly overlapping each stroke. Keep the can the same distance from the surface. Keep the can in motion while spraying. Pause and shake can often during use. Apply two or more moderate coats at moderate speed to avoid drips and runs. Do NOT use near open flame. Allow to fully dry.

Step 4



Read and follow all manufacturer's instructions provided with the Rust-Oleum Enamel or Metallic Spray. Shake can vigorously for one minute after the mixing ball begins to rattle. (If mixing ball fails to rattle DO NOT STRIKE CAN. Contact Rust-Oleum.) Slide the red safety clip away from the trigger (Universal Metallics only). Hold can upright 10-12" from surface and spray in a steady back-and-forth motion, slightly overlapping each stroke. Keep the can the same distance from the surface. Keep the can in motion while spraying. Pause and shake can often during use. Apply two or more moderate coats at moderate speed to avoid drips and runs. Do NOT use near open flame. Allow to fully dry.

Materials & Supply List:

- Rub 'n Buff Autumn Gold | 0.5-fluid ounce tube (for Bronze).
- Rub 'n Buff Silver Leaf | 0.5-fluid ounce tube (for Pewter).*
- Rust-Oleum Flat Black or other good quality enamel paint.
- Cheesecloth
- Lacquer thinner
- Lacquer
- Clean, lint-free rag



WARNING: Wear protective gloves and safety goggles.

*Rub 'n Buff is available directly from the manufacturer at: (www.amaco.com) or at hobby, craft and art supply stores.

Step 1

Inspect damaged area to be repaired. If the unit has deep gouges, they may have to be filled with Bondo, sanded flush, and then finished. Visit (www.bondo-online.com) for details.

Step 2

Remove any loose paint, rust, dirt or corrosion. Wipe the area clean using a clean rag and lacquer thinner. Allow the repair area to fully dry. This step will degrease the repair area and provide a clean surface for painting the basecoat.



Step 3

Mask off any part of the door or grille to protect the surrounding areas not meant to be painted. Apply light coats of the black base coat. You may need to apply more than one coat to fully cover; several light coats will give a better finish than one heavy coat. Please follow all paint manufacturer's recommendations.



Step 4

Mix 2 cups of lacquer thinner and 1 cup of lacquer with 1/2 of the Rub 'n Buff™, and stir for 2 minutes.



Step 5

Using your hands, lightly pull the cheesecloth apart, this will create the uneven pattern needed to produce the paint finish. Place the cheesecloth into the paint mixture. Squeeze out most of the paint so that the cheesecloth is slightly damp.



If the cheesecloth is too wet or dry, you will not be able to produce the desired effect. You may need to practice on a piece of scrap wood or cardboard to perfect the faux paint finish technique.


Step 6

With your hand moving in a figure 8 pattern, lightly press the damp cheesecloth onto the door surface. To blend the new paint, increase the size of the figure 8 pattern to include more of the surrounding area of the door. Mistakes or over-applied paint can be removed immediately with a clean rag and lacquer thinner.



Step 7

The repair area can be toned down or further blended by adding a light spray of black paint. This should be done from a distance of more than 12" to create a light mist using short spray bursts.

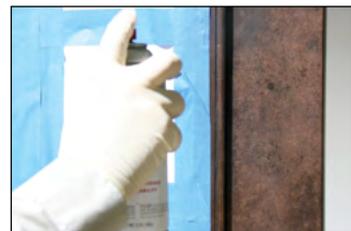

Step 8

Please repeat steps 6 and 7 until you have reached the desired effect. Please allow all paint to fully dry before using the door or grille product.